

HAND-GUARDS – SETUP INSTRUCTION




Before you begin: Read and understand the instructions before starting any work. Ensure that all parts are ready and that you have all the tools required for assembly.

Note: ANOTHER EUROPE is not responsible for any damage caused by incorrect assembly. ANOTHER EUROPE recommends that all original parts be assembled by authorized ANOTHER EUROPE dealers. Before assembly, park the vehicle on a flat surface, place the transmission gear in the park position (P), and then turn off the ignition switch.

APPLICABLE TO MODELS: A650/800/1000

PARTS LIST:


S/N	PART NAME	PART NUMBER	Qty
1	Hand-guard	LEFT: 17005160080	1
		RIGHT: 17005160090	1
2	Hand-guard Mounting Plate	LEFT: 17005160030	1
		RIGHT: 17005160040	1
3	Hand-guard Mounting Plate Sleeve	LEFT: 17005160290	1
		RIGHT: 17005160300	1
4	Hexagon Head Screw M6x12	03414060124	3

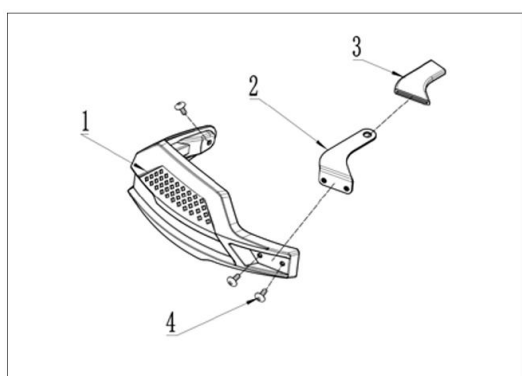


TOOL LIST:

ITEM	NAME	Q-ty
1	Air Gun	1
2	Hexagon Wrench T30	1


STEPS:

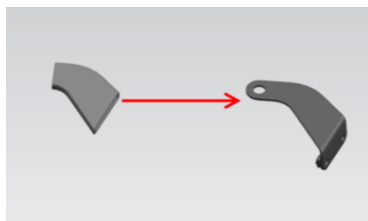


1. Place the hand-guard mounting plate sleeve onto the hand-guard mounting plate.

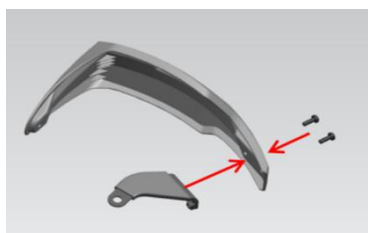


2. Place the hand-guard mounting plate in the installation position and secure it using two M6x12 hexagon head screws.

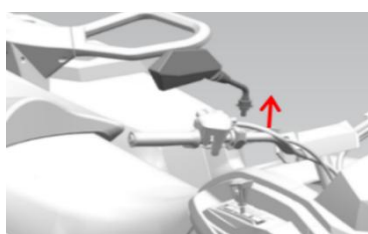

3. Remove the rearview mirror.

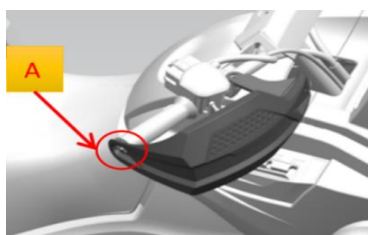

4. Place the hand-guard into the installation position and screw in the M6x12 black hexagon head screw (at hole A).

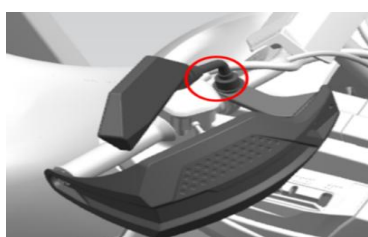

5. Tighten the rearview mirror, and the installation is complete.

TIGHTENING TORQUES:

GRADE	TORQUE					
	M6	M8	M10	M12	M14	M16
4.6	4-5	10-12	20-25	30-45	55-70	80-110
5.6	5-7	12-15	25-32	45-55	70-90	110-140
6.8	7-9	17-23	33-45	58-78	93-124	145-193
8.8	9-12	22-30	45-59	78-104	124-165	193-257
10.9	13-16	30-36	65-78	110-130	180-201	280-330
12.9	16-21	38-51	75-100	131-175	209-278	326-434